


FILLING YOUR LIGHTER

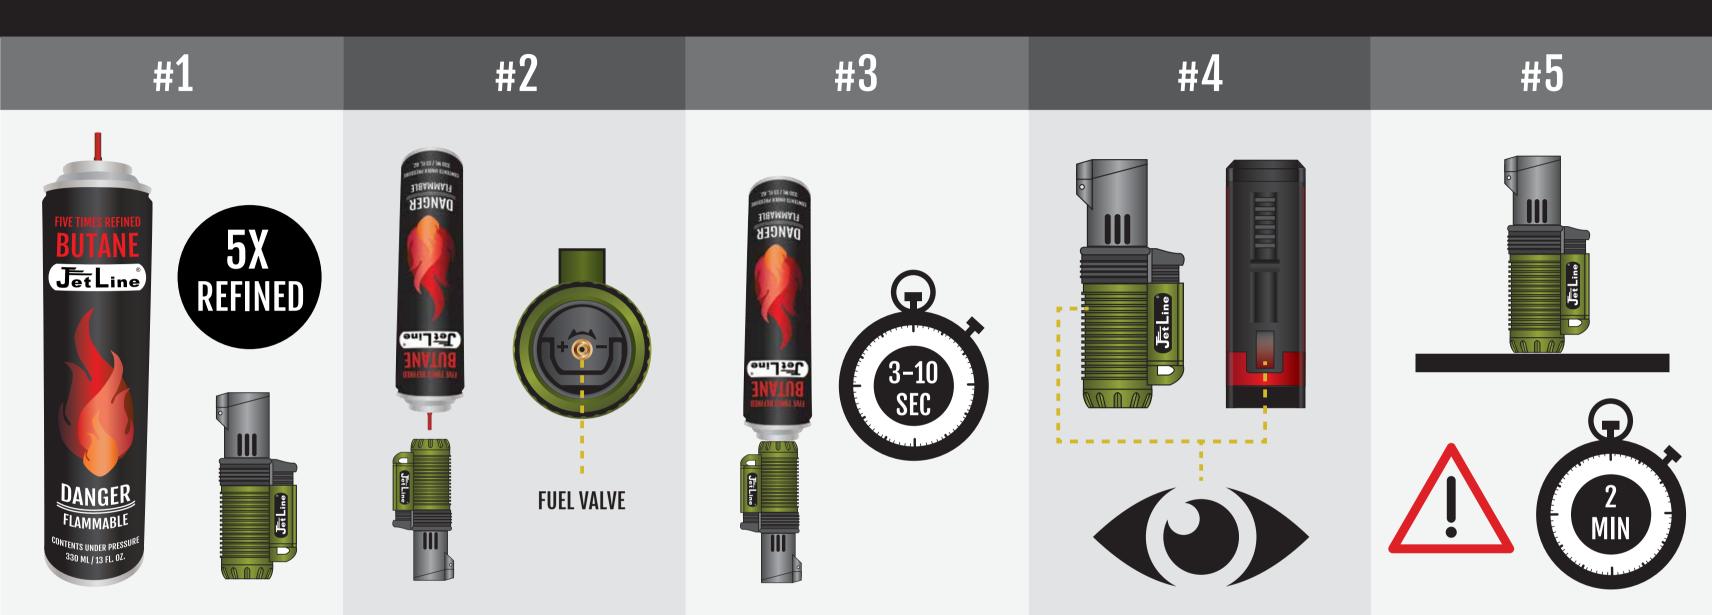

Step One: The Right Fuel

For JetLine lighters, we recommend using JetLine Butane. If you do not wish to use JetLine Butane, please use FIVE TIMES REFINED butane for our products.

Using poorly refined, or over refined butane can cause adverse effects on the lighters performance and longevity.

Step Two: Fuel Valve and Orrientation

Please turn both the lighter and butane can upside down. The butane is actually a liquid inside of the can and needs to flow downwards in order to fill the fuel tank.

The fuel valve is always at the bottom of the lighter, and almost always in the center. If it is not immediately visible, likely you have a model with a flip out punch cutter. Please flip out the punch cutter and find the valve.

Step Three: Insert Butane Can

Holding the lighter in one hand and the butane can in the other, insert the butane can tip into the fuel valve of the lighter. Apply a small amount of pressure to continue pushing the tip into the fuel valve.

You should be able to hear the release of butane from the can. It is normal for a small amount to spray around the edges of the valve. If a large amount of butane is spraying, please try reinserting the tip at a better angle or using a tip adapter.

Step Four: Verify Fuel Levels

After releasing the butane can from the fuel valve after **3-10 seconds**, verify that butane has filled the tank.

If the tank is clear, you will see a liquid inside. If the lighter has a fuel window, move the lighter around to see the liquid moving. If the lighter has a color changing fuel window, the color should be red to indicate it is full.

Step Five: Let Butane Settle

After you have verified that you have successfully filled up the lighter, please place the lighter standing right side up on a flat surface.

Allow 2 minutes to pass before igniting to ensure the butane has properly settled into the tank. If you ignite the lighter before 2 minutes, the flame height may be unpredictable and erratic.